



www.precisionarmament.com

Precision Armament
Wellsville, NY 14895
PH: 1-800-724-3802
FX: 1-585-593-5637

MADE IN THE USA



Precision Armament Tactical Shotgun Rail Remington Tactical 870/1100/11-87

IMPORTANT: READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION.

WARNING: MAKE SURE FIREARM IS UNLOADED BEFORE INSTALLATION. VISUALLY INSPECT CHAMBER, MAGAZINE, AND FIRING MECHANISM TO BE CERTAIN NO AMMUNITION IS IN THE FIREARM.


PRE-DRILLED RECEIVERS: This sight rail is designed to mount to a pre-drilled Remington Tactical model 870/1100/11-87. First properly clean and degrease contact surface of sight rail, top of receiver, and threads on receiver and torx screws using a

suitable solvent. An epoxy, Loctite, or other suitable bedding compound can be applied between sight base and top of receiver. This is not required, however 'bedding' the sight rail will eliminate space between the receiver and sight base were moisture can accumulate and cause corrosion. A thread locking compound can be applied to the mounting screws for a stronger and more permanent installation. Tighten #6-48 long (.25") torx screws to 18 in-lbs of torque, tighten short (.14") torx screws to 10 in-lbs of torque.

MODEL 870 INSTALLATION: Use three (3) long torx screws in rear mounting hole positions and one (1) short torx screw in front mounting hole position.

MODEL 1100 & 11-87 INSTALLATION: Use one (1) long torx screw in rear mounting hole position and three (3) short torx screw in front mounting hole positions.

CUSTOM INSTALLATION: Machining dimensions for models requiring custom drilling and tapping of receiver for #6-48 screws are featured below. Front edge of sight rail is intended to mount flush to front edge of receiver.

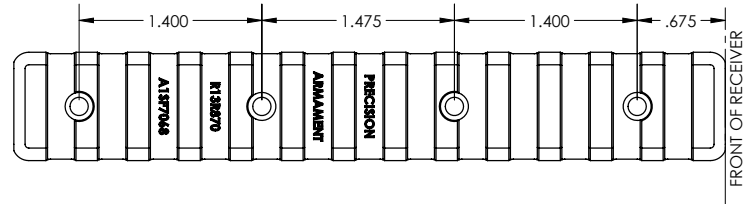

Copyright © 2014 Precision Armament, DOC -A006

www.precisionarmament.com

Precision Armament
Wellsville, NY 14895

PH: 1-800-724-3802
FX: 1-585-593-5637